



- 1. T101 (Main Under-Hood / Relay Box)
- 2. VTEC Oil Pressure Switch
- 3. No. 1 Ignition Coil
- 4. No. 2 Ignition Coil
- 5. No. 3 Ignition Coil
- 6. CMP (TDC) Sensor B
- 7. No. 4 Ignition Coil
- 8. G101 (Engine Ground Via Engine Wire Harness)
- 9. Primary Heated Oxygen (PHO2S)
- 10. Secondary Heated Oxygen Sensor
- 11. Back-up Light Switch
- 12. Vehicle Speed Sensor (VSS)
- 13. CMP (TDC) Sensor A
- 14. C101
- 15. ECM Connector B
- 16. ECM Connector C
- 17. C104 (Connect to C103)
- 18. C102 (Junction Connector)
- 19. C103 (Connect to C104)
- 20. Idle Air Control (IAC) Valve
- 21. Intake Air Temperature (IAT)
- 22. No. 4. Injector
- 23. Starter Solenoid
- 24. Map Sensor
- 25. A/C Compressor Clutch
- 26. Alternator
- 27. T102 (Alternator)
- 28. Knock Sensor
- 29. Throttle Position (TP) Sensor
- 30. No. 2 Injector
- 31. Crankshaft Position Sensor
- 32. No. 1 Injector
- 33. No. 3 Injector
- 34. Engine Coolant Temperature (ECT Sensor)
- 35. T103 (Engine Oil Pressure Switch)
- 36. VTEC Solenoid Valve